

В

 ∇

NOTES:

2

3


4

I. INSTALL LEFT SIDE MPO CASSETTES WITH ADAPTERS ANGLED TOWARD THE LEFT AND INSTALL RIGHT SIDE MPO CASSETTES WITH ADAPTERS ANGLED TOWARD THE RIGHT.

А

- 2. NYLATCH PLUNGER FASTENERS MUST BE PULLED OUT BEFORE INSERTING THE MPO CASSETTE INTO MOUNTING HOLES IN PANEL.
- 3. AFTER INSTALLING MPO CASSETTE, PUSH NYLATCH PLUNGER FASTENERS "IN" TO LOCK CASSETTE INTO PANEL.

A	В	\square

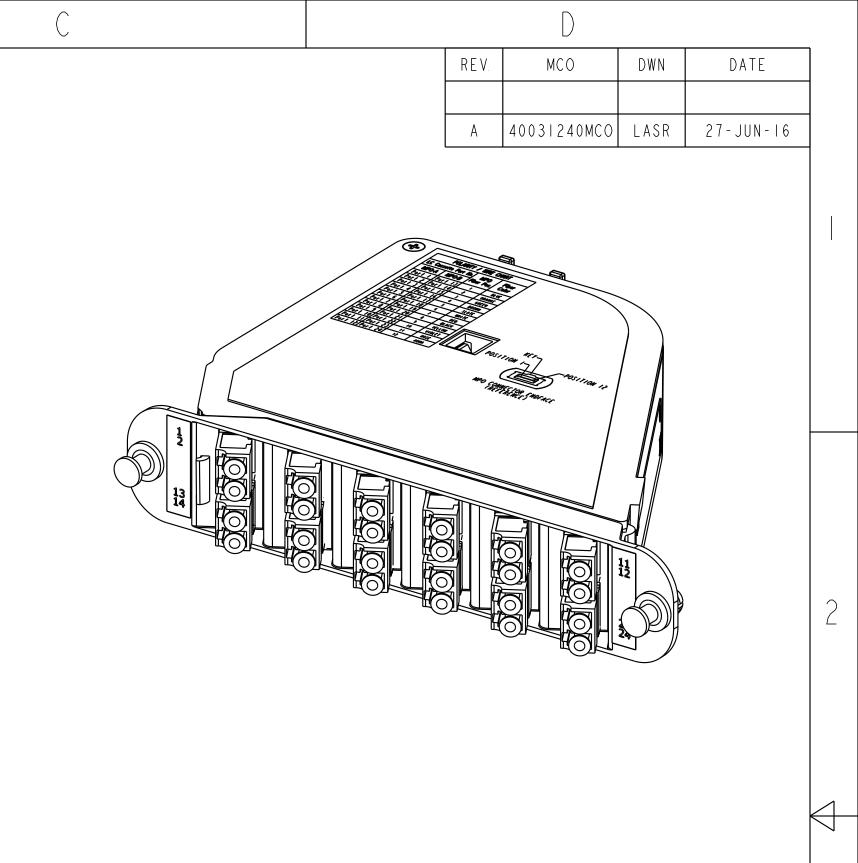

3

4

LC RIGHT CASSETTE SHOWN FOR REFERENCE

		© 2016 COMMSCOPE, INC.CONFIDENTIAL NOTICE: THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPRIATARY PROPERTY OF COMMSCOPE, INC.AND MAY BE USED ONLY FOR THE SPECIFIC PURPOSE AUTHORIZED IN WRITING BY COMMSCOPE, INC.
COMMSCOPE,	INC.	ALL DIMS AND TOLERANCESXX:±N/ACDRAWING NUMBERAARE INCHES UNLESS.XXX:±N/ASIZE300100117782AOTHERWISE SPECIFIED ANGULAR:±N/ASIZE300100117782REV
		DO NOT SCALE DRAWING ENGR: LUIS MIGUEL RENTERIA SHT. I OF 2 DWN: ASAHEL SALCEDO
Ć		DIMENSIONS IN INCHES

